

WHEN INSERTING BILLS THE HOPPER PAYS OUT  
INSTEAD OF SHOWING ON THE CREDIT METER

DO THIS:

The board has been cleared with a clear chip and the denomination has been set.

The bill validator accepts bills but pays them out of the hopper.

Here is the fix.

Turn the machine off.

Set DIP switch 4 to it's opposite position.

Turn the machine on.

Use the test button to go to test 3.

This should show the credit mode of 5xx2.

Turn the key switch till you see 8xx(?)  
and make it 8xx1.

Get out of test mode and close door.